

INSTALLATION MANUAL

APR

OPEN AIR INTAKE 2.0 TDI

CI1000TDI - VERSION 1.0 - 07/2024



NOTES:

These instructions are written for a European Volkswagen Golf VII 2.0 TDI specification, but other models are similar.

When disassembling the car, be sure to keep all fasteners so they can be re-used. It is recommended that you get some kind of tray with compartments to organize the fasteners, such as a fishing tackle box or several large ice cube trays. Fasteners that are not re-used for re installation are noted in the instructions. All directions used in this manual (right, left, front, etc.) are based on if you were sitting in the driver's seat of the car.

These instructions assume that you have basic mechanical skills and several varieties of basic hand tools in order to install the kit. If you have any questions about installing this kit, feel free to contact your APR representative.



WWW.GOAPR.DE
PORSCHESTRASSE 1 - 79761 WALDSHUT-TIENGEN - GERMANY





- 1.** Loosen the clamp that connects the airbox and the inlet hose.


2. Unlock and remove the mass air flow sensor plug.





3. Now disconnect the vacuum hose that is attached to the top of the airbox.

4. Remove the original hose from the valve at the front.

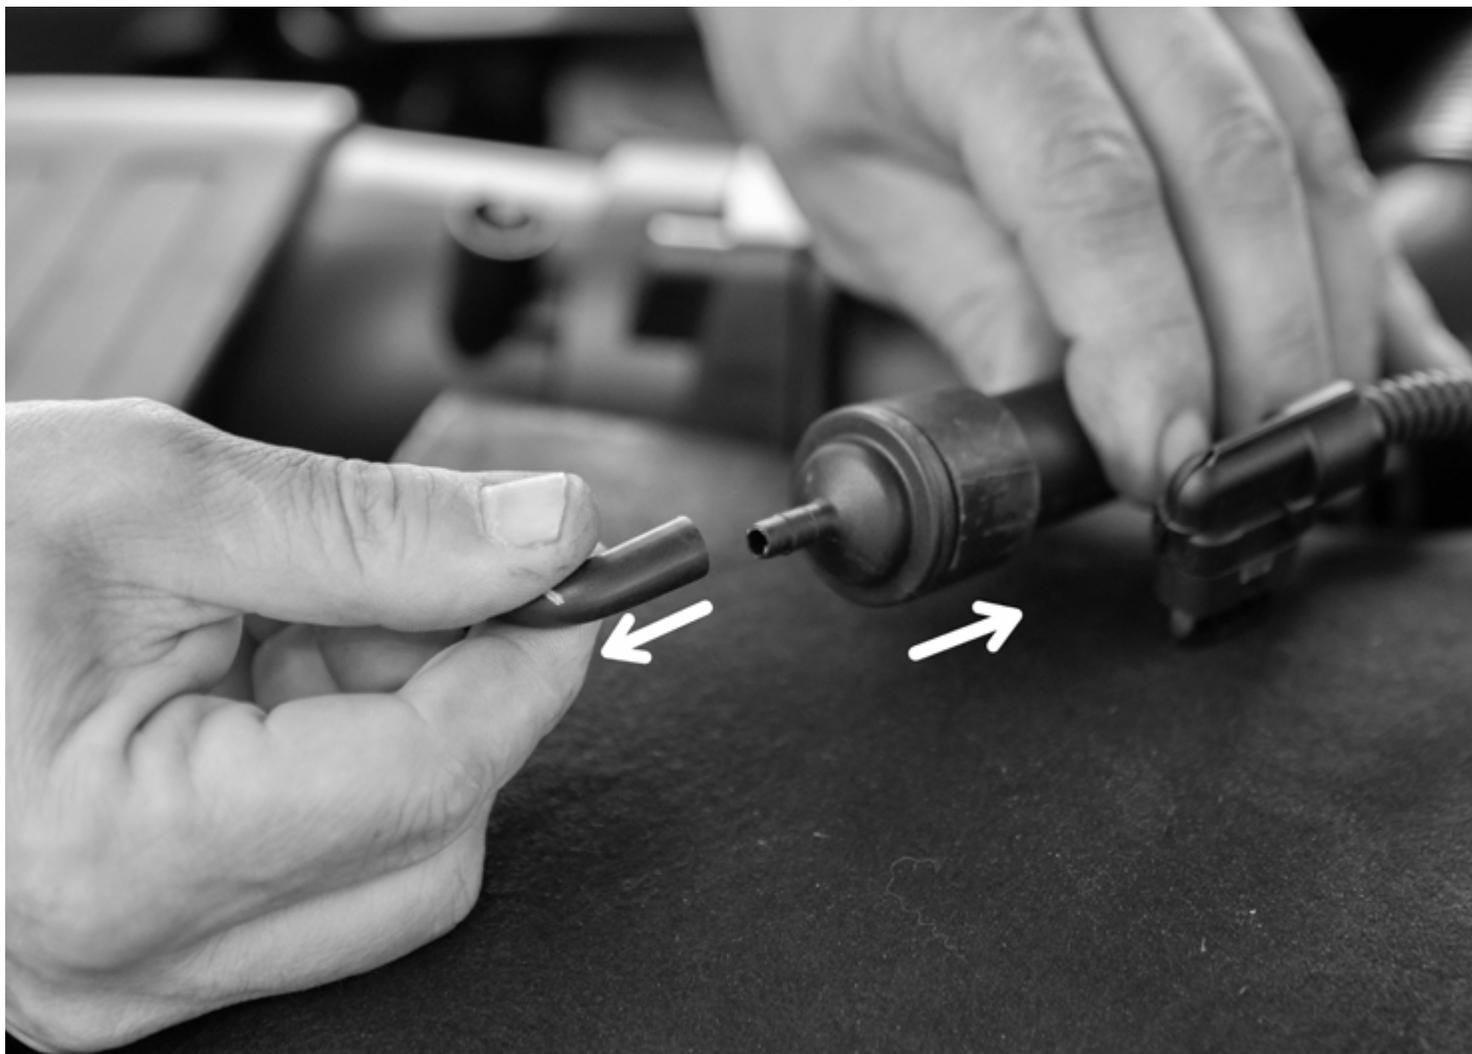



5. Disconnect the intake hose from the airbox unit.

6. Remove the original air filter box upwards from the vehicle.





7. Unscrew the Torx screw from the removed air filter box.

8. Remove the installed mass air flow sensor from the air filter box by turning it slightly to the left.





9. Screw the Stoll Sport adapter to the mass air flow sensor.

10. Attach the supplied hose to the valve.





11. Place the valve with the hose underneath the intake next to the battery.

12. Connect the hose to the APR inlet.

PLEASE NOTE:

The supplied hose must be shortened depending on the model. Adjust it so that it does not obstruct any other components.






13. Insert the airbox with the adapter into the vehicle and connect the plug for the mass air flow sensor.

Ensure that the fastening elements are inserted correctly.

14. Insert the air filter into the airbox and tighten it with approx. 8 Nm.

PLEASE NOTE:

To avoid material breakage, do not overtighten the air filter.

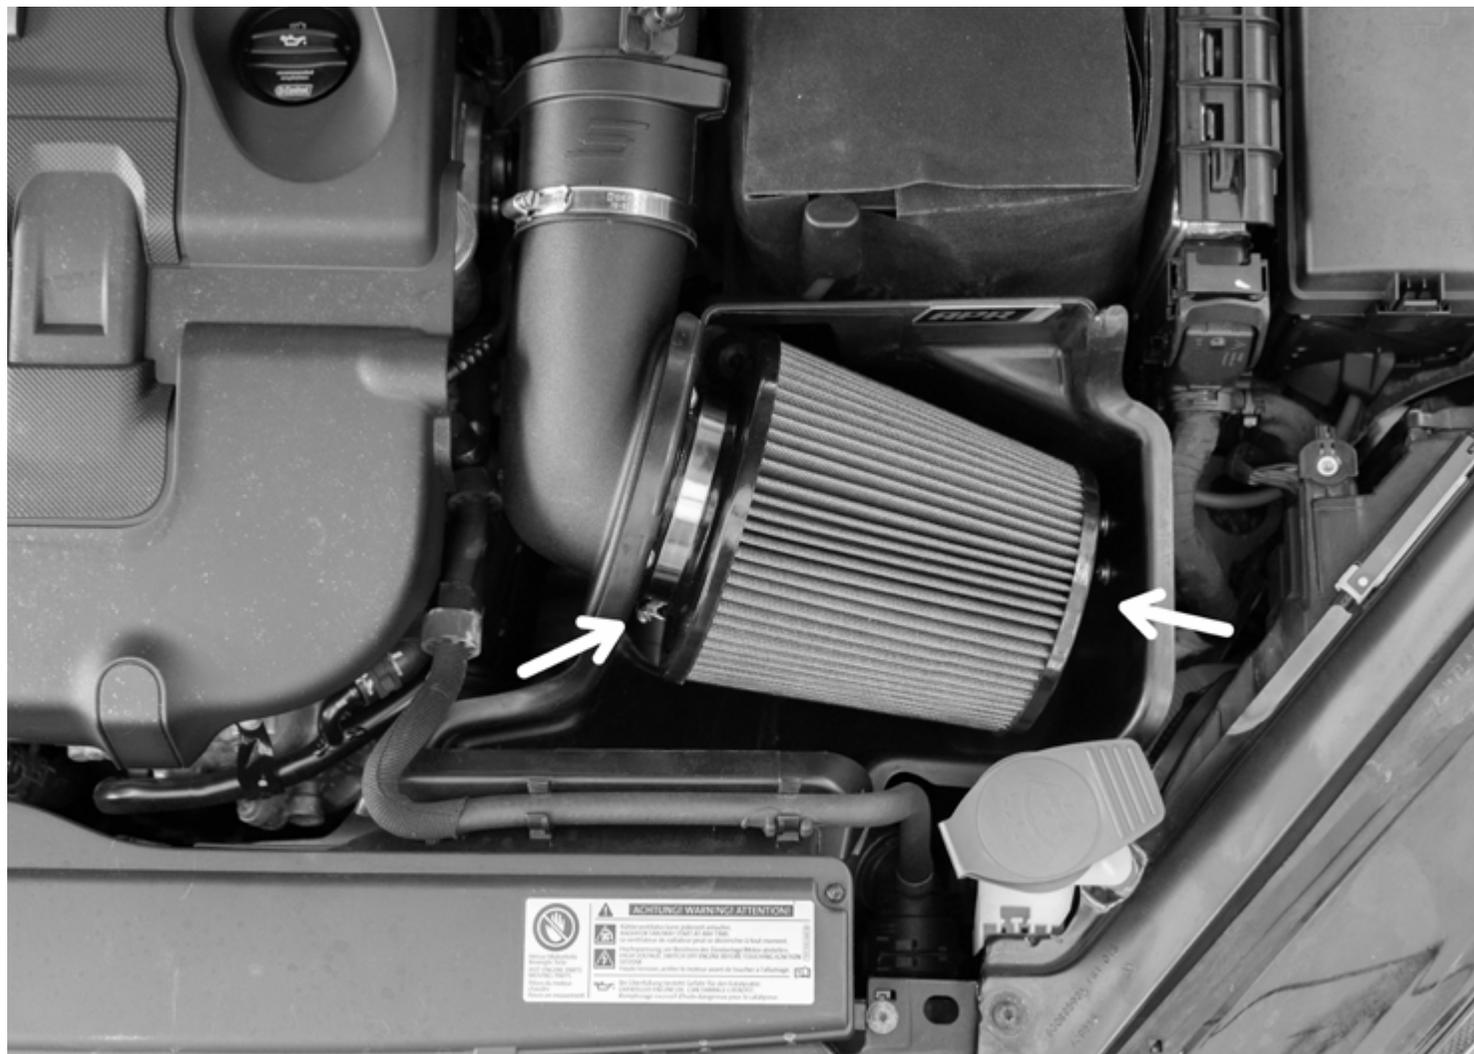

CONTACT

Stoll GmbH / APR Deutschland

Porschestraße 1

79761 Waldshut-Tiengen (Germany)

Phone: +49 7741 6000-66

E-Mail: info@goapr.de

APR

WWW.GOAPR.DE
PORSCHESTRASSE 1 - 79761 WALDSHUT-TIENGEN - GERMANY

 **STOLL**
AUTOMOTIVE